


# File Delete Sequence


1. Insert a USB drive into the ChipCHECK USB port (only if the file to be deleted resides on the USB drive).




2. Navigate to the "Copy to USB" screen.

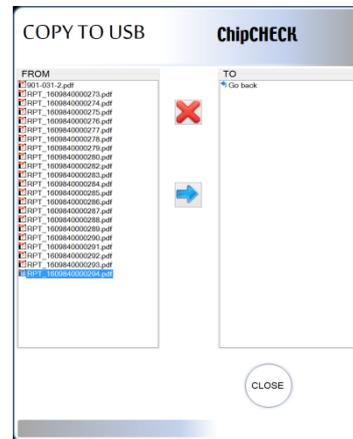


3. Select the files to be deleted in either the "FROM" or the "TO" column.

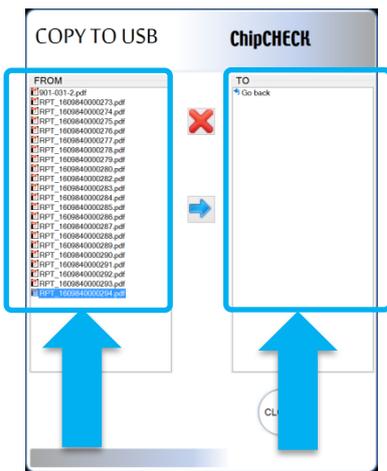

4. Note that the files shown in the "TO" column are those saved on the USB drive.

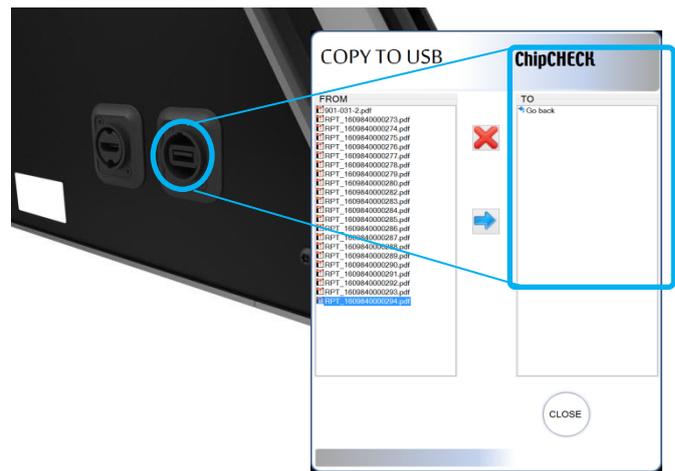

5. Select the delete button (red 'X') to delete the highlighted files.

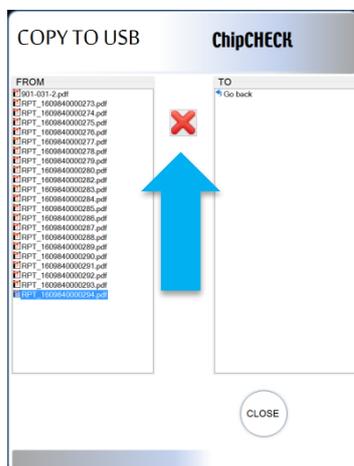

6. Remove the USB drive from the unit and select "Close".

